 


REMINGTON®

Nose and Ear Trimmer




NE3150

 www.remington-europe.com

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
-  Suitable for cleaning under an open water tap.
- This appliance is battery operated only.
- This product uses alkaline batteries. At the end of their life the batteries must be removed from the appliance and be recycled or disposed of properly in accordance with your state and local requirements.
- This appliance is not intended for commercial or salon use.

BATTERY SAFETY

- Remove batteries if the unit is not in use for long periods.
- It is not recommended to use a rechargeable battery.
- Do not dispose of used batteries in a fire.
- Do not short circuit the battery contacts.
- Used batteries must be removed from the appliance, recycled or disposed of in an environmentally friendly way (see RECYCLING).

PARTS


- | | |
|-------------------|------------------------|
| 1. Linear trimmer | 3. Battery compartment |
| 2. On/off switch | |

GETTING STARTED

INSERTING BATTERIES

Your hygiene clipper requires 1 'AA' alkaline battery.

- Ensure the product is switched off.
- Rotate the battery compartment cap approximately ¼ turn anti-clockwise then pull off.
- Insert 1 'AA' alkaline battery so that the (+) and (-) marks on the battery face the same mark in the battery compartment.

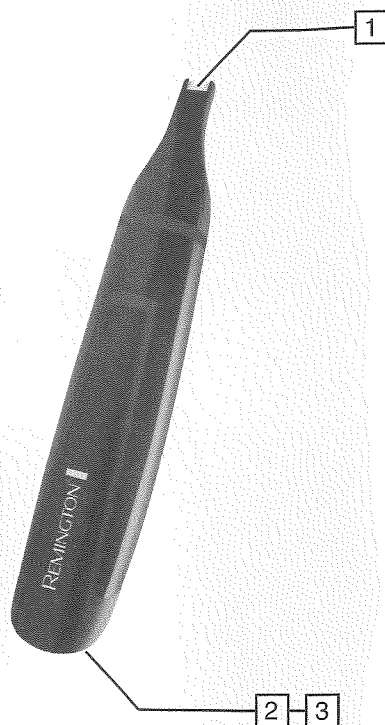

- Place the cap back on the unit using the alignment marks and rotate clockwise until the cap snaps into place.
- Note: your trimmer will not work if the batteries are inserted incorrectly.
- Note: remove batteries if the unit is not in use for long periods.

INSTRUCTIONS FOR USE

TURNING ON THE TRIMMER

- The On/Off switch is integrated into the battery cap.
- Rotate the battery cap clockwise to turn on.
- To turn off, simply rotate the battery cap anti-clockwise to the off position.

TO REMOVE HAIR FROM NOSE

- Insert the groomer's cutting unit gently into the nostril.
- Gently move the groomer in and out of the nostril and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

TO REMOVE HAIR FROM EAR

- Insert the cutting unit gently into the outer ear canal opening.
- Gently rotate appliance in a circular motion.
- Avoid inserting the cutting unit more than 6mm into your ear canal.
- NOTE: Do not apply excessive pressure as this damages the clipper head and may cause skin injury.

CARE FOR YOUR TRIMMER

- Care for your product to ensure a long lasting performance. We recommend you clean your appliance after each use. The easiest and most hygienic way to clean the trimmer is by rinsing the product head after use with water.
- The trimmer blades can be kept running whilst rinsing.

AFTER EACH USE

- Rinse the accumulated hair from the cutters and shake off excess water.
- Wipe the main unit with a damp cloth and dry immediately.

CLEANING CAUTIONS

- Do not use harsh or corrosive cleaners on the units or their blades.
- Do not apply pressure or hard objects to cutters.
- Do not submerge in water as damage will occur.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.