

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not move the appliance whilst it is in use. Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Hot surface – do not touch the hot section or heating components of the appliance. Take care not to pour water on the heating element.

WARNING: WARNING: KEEP THE APPLIANCE AWAY FROM FLAMMABLE MATERIALS.

CARE AND MAINTENANCE

Before attempting any cleaning or maintenance, unplug the waffle maker from the mains power supply and allow to cool fully.

STEP 1: Wipe the waffle maker housing with a soft, damp cloth and dry thoroughly.


STEP 2: Remove baked on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel or nonabrasive scourer.

Do not immerse the waffle maker in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the waffle maker, as this could damage the surface.

Note: The waffle maker should be cleaned after every use.

DESCRIPTION OF PARTS

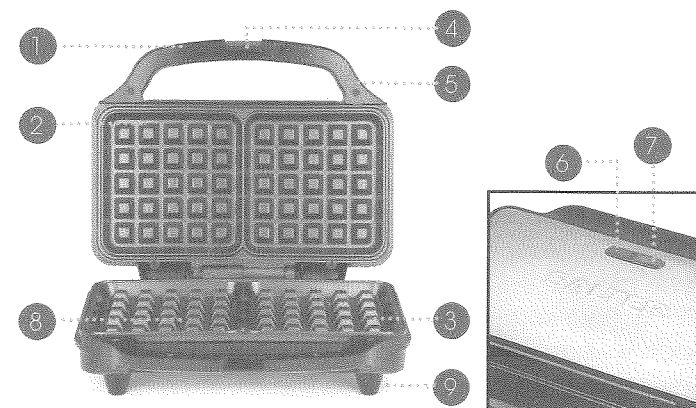

- | | |
|------------------------------|------------------------------------|
| 1. Deep Fill Waffle Maker | 7. Green ready indicator light |
| 2. Upper housing | 8. Non-stick coated cooking plates |
| 3. Lower housing | 9. Non-slip feet |
| 4. Handle lock | |
| 5. Cool-touch handle | |
| 6. Red power indicator light | |

INSTRUCTIONS FOR USE

BEFORE FIRST USE

STEP 1: Check that the waffle maker is switched off and unplugged from the mains power supply.

STEP 2: Wipe the waffle maker housing with a soft, damp cloth and dry thoroughly.

Do not immerse the waffle maker in water or any other liquid.

Note: When using the waffle maker for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the waffle maker.

INSTRUCTIONS FOR USE

USING THE DEEP FILL WAFFLE MAKER

Before each use, carefully apply a thin coat of cooking oil to the non-stick coated cooking plates, rubbing it in carefully with a paper towel. This will help to prolong the life of the non-stick coating and stop the waffle from sticking.

STEP 1: Prepare the waffle batter.

STEP 2: Plug in and switch on the waffle maker at the mains power supply. The red power indicator light will illuminate, signalling that the waffle maker has been switched on and is heating up.

STEP 3: Preheat the waffle maker for approx. 4 minutes. The green ready indicator light will illuminate once the required temperature has been reached.

STEP 4: Carefully open the lid using heat-resistant oven gloves.

STEP 5: Pour some of the batter into the centre of each well on the lower non-stick coated cooking plate and then carefully close the lid. To avoid spillages, slowly pour a small amount of the batter into the centre of the well and wait for it to evenly distribute before adding more.

STEP 6: Cook for approx. 5–10 minutes or until golden brown; check periodically by carefully opening the lid. If needed, the waffles can be cooked a little while longer, until they are browned to preference.

STEP 7: Once cooking is complete, use heat-resistant oven gloves to carefully open the lid and then remove the waffles with a heat-resistant plastic or wooden spatula.

When creating multiple batches of waffles, close the lid after removing each batch to maintain the heat.

STEP 8: Switch off and unplug the waffle maker from the mains power supply. Leave the lid open and allow to cool.

Note: Do not overfill the wells; the batter will expand whilst cooking. It is recommended to fill each well by $\frac{2}{3}$.

Always preheat the non-stick coated cooking plates before starting to cook. During use the green ready indicator light will cycle on and off to indicate that the waffle maker is maintaining the temperature.

Caution: Exercise caution during cooking; the waffle maker will emit steam.

WARNING: THE WAFFLE MAKER AND COOKING PLATES GET VERY HOT DURING USE; ALWAYS USE HEAT-RESISTANT GLOVES TO AVOID INJURY.

STORAGE

Check that the waffle maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the waffle maker; wrap it loosely to avoid causing damage.

SPECIFICATIONS

Product code: EK2249

Input: 220–240 V ~ 50/60 Hz

Output: 900 W

If this product does not reach you in an acceptable condition, please contact our Customer Services Department at www.saltercookshop.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions). Go to www.saltercookshop.com and search **EK2249** to access the instruction manual for your product.

*To be eligible for the extended guarantee, go to www.saltercookshop.com and register your product within 30 days of purchase.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



FULL INSTRUCTION MANUAL AT
www.saltercookshop.com/instruction-manuals.html
PRODUCT CODE: **EK2249**

SALTER®

Deep Fill Waffle Maker

QUICK START GUIDE

Find us on 
www.facebook.com/SalterCookshop

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.
MADE IN CHINA.

CD210520/MD000000/V1