


PLM-305G

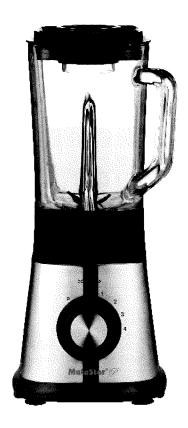

STAINLESSSTEELBLENDER

WWW.Matestar.EU

INTRODUCTION

Congratulations on your choice of Blender Stainless Filter.

To ensure optimal performance of your product, carefully read the instructions below. It is recommended not to throw away this Instruction Manual, it should be save it for future reference.


Note: It is common for new appliances release a light smoke or gases during the first few times they are used. This happens due to heating the materials and components used in the manufacture of the device. It normal and does not indicate the existence of defects in the device.

CARE

- •Do not use devices presenting any kind of damage the power cord, inplug or other components in order to avoid risks.
- The blender should always be switched off before connecting or disconnecting an electrical outlet. Never disconnect the plug by pulling the power cord.
- This appliance is not intended for use by persons (including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are supervised or instructed by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the device.
- Do not turn the unit on surfaces pools of liquid.
- Do not leave the unit turned on with no one around.
- · Be careful to avoid injury when handling blades or sharp parts.
- To prevent accidents, you should avoid contact and keep hair, clothing, as well as other utensils away from moving parts of the machine.
- Avoid removing the glass cup with the appliance.
- Never place hands or objects inside the glass cup with the connected device.
- To protect against shock or other accidents, do not immerse the power cord, the plug or the appliance itself in water or other liquid.
- Do not let the power cord hang from tables or counters.
- Do not put the blender on or near gas or electric stoves or within heated furnace.
- Remove the plug from the electrical outlet before cleaning or when not in use.
- The use of accessories not of the instrument may damage the operation and cause damage to the user and the product, besides causing loss of warranty.
- Do not clean the blender with metal sponges. Metallic particles may be Drop the sponge and get in contact with the electrical components of the appliance, creating a risk of electric shock.
- To avoid losing the warranty and to avoid technical problems, the user should not repair the unit at home.
- The invoice and warranty certificate are important documents and should be kept for warranty purposes.

COMPONENTS

- 01. Measure cup
- 02. Jar cover
- 03. Jar
- 04. Handle
- 05. Knife set
- 06. Speed selector

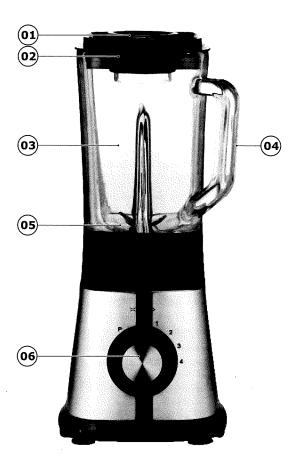

MOUNTING CUP

Make sure that the product is disconnected from the mains.

OPERATION

Important.

- Before fitting the glass at the base, ensure that the appliance is switched off.
- The appliance has a safety device that only allows the drive to glass properly seated in the cradle.
- · Before using, make cleaning the glass (see item for cleaning better detail)

Using the speeds

1-Add ingredients.

2-Close the lid of the blender.

Turn the 3-speed 1-4 to start the operation.

After receiving the 4-position button on speed 0 to turn off the device.

Auto Cleaning Pulsar

Rotate and hold the gear in a counterclockwise direction to perform cleaning cup or as needed in the preparation of some recipes.

The Auto Clean Pulsar also serves to initiate the preparation of recipes using very hard pieces of food.

Important.

Avoid placing very large pieces of food, always cut into pieces small, this will ensure a good mix and avoid possible damage to the blades.

TIPS FOR USE

- It is important before first use make the process of self-cleaningCLEANING check item for details.
- Food harder or more must be consistent added in small pieces, by opening the measure cup with the appliance.
- Do not add more than a cup of solid food grains and not exceed one minute of operation.
- To crush ice, put a glass of water and add the stones moderately with the appliance.
- Do not connect the appliance with the glass empty glass.
- Do not use abrasive cleaners, scouring powders, etc., since they can damage the device.

CLEANING

For a quick and effective cleaning of the glass and the glass slides using the Auto cleaning:

Place approximately pulse

- 1-500ml of cold water or warm water.
- 2-Add a little detergent.
- 3-Close the lid of the blender.
- 4-Pressing the Self-Cleaning for a few seconds.
- 5-After finishing rinse the glass with tap water.

Attention:

When the blender is used for the first time make the cleaning process twice.

If necessary, make the cleaning process more than once.

Note:

- · For more recipes greasy use warm water with mild detergent and repeat operation.
- The plastic cup is not removable. For cleaning it should be used only button Auto Cleaning Pulsar.
- · Be careful when touching the blades as they are very sharp.

To clean the basis of:

- 1) Turn off the unit and remove the plug from the electrical outlet.
- 2) To clean use only a clean, dry or lightly moistened with water. Do not use solvents or any other chemical.

Rating:

220V-240V~50/60Hz 650W

GUARANTEE CARD CUSTOMER'S DETAILS NAME OF BUYER ADDRESS TELEPHONE DETAILS OF SHOP NAME OF SHOP RECEIPT VOUCHER NO. DATE OF PURCHASE

APPLIANCE DETAILS
TYPE OF APPLIANCE

MODEL NO. SERIAL NO.