

BAUER™
PROFESSIONAL

BAUER™
PROFESSIONAL



USB RECHARGEABLE PERSONAL GROOMING SET

INSTRUCTIONS FOR USE


Important: Please read before use and retain for future reference

BACK

FRONT

IMPORTANT SAFETY INSTRUCTIONS

Safety Instructions:  Read this manual before using this appliance.

 **Warning!** Read all safety warnings and instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or injury.

The intended use of this device is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury. Always check the mains voltage corresponds to the voltage on the rating plate or electronic device you are connecting to.

Always use a USB power connection with surge protection.
DO NOT USE if the USB cable is damaged.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

HOW TO USE

CHARGING

- Charging 8 hours/ Run Time 40 minutes.
- Rating voltage: AC 220-240V (50/60Hz)
- Close power switch. Please insert the USB cable into the power socket. The indicator light will be lit when charging.

Only use this appliance with a charged battery do not use connected direct to a mains outlet via the USB connection supplied.

INSTRUCTIONS FOR HEAD REPLACEMENTS

To change attachments, hold the trimmer body with the switch side facing towards you. Turn the attachment and pull off. Position the replacement attachment at the top of the trimmer body, then push down and attach.

CLEANING & MAINTENANCE

Clean your Multi-Function Trimmer regularly ensure it is switched OFF before cleaning. Use the brush supplied to clean this trimmer. Thoroughly brush and blow out hair clippings from the power handle. Never expose trimmer body to water.

USING THE TRIMMER

(A) Nose / Ear Trimmer

- The nose trimmer is designed to remove unwanted hair from the nose or ear areas.
- Gently approach the area to be trimmed. Never force the nose trimmer into nose or ear cavities as this can result in injury.
- If you experience any pain or discomfort when using this product STOP using it immediately.
- Always clean the trimmer after use and use the cap to protect the nose trimmer head.

(B) EYEBROW TRIMMER

You can use this attachment for trimming eyebrow hair, fine facial and ear hair, or any stray body hairs.

(C) SIDEBURN TRIMMER

You can use this attachment for smaller areas such as hairlines and sideburns. Hold the trimmer so the shaver screen gently touches your skin. Avoid holding the trimmer at an angle this will distort the screen and may cause some skin irritation.

(D) BEARD TRIMMER

You can use this attachment for trimming your beard.

SPECIFICATION:

Battery type: 1 x 1.2V DC NiMH 300mAh. Rechargeable non-replaceable.
USB connection: For charging battery only.

BATTERY CARE

The battery in this appliance is a rechargeable non replaceable battery. Please dispose of the battery responsibly.



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



Imported by BML Liverpool L24, 9WD
Made in China. © 2020.