



1.7L Cordless Kettle

Instruction Manual



1.7L
CAPACITY

Max
2200W

AUTO
SWITCH
OFF

WASHABLE
FILTER

Item No. 35019 / 35109 / 35219 / 35009 / 35429

IMPORTANT! SAFETY INSTRUCTIONS:



READ THIS MANUAL BEFORE USING THIS APPLIANCE.



WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY

1. **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
2. **Always check the mains voltage corresponds to the voltage on the rating plate.**

CAUTIONS

- Only use this kettle for its intended purpose, (Domestic use only).
- Do not immerse the kettle or its base into water.
- Connect the appliance only to an alternating current of the voltage specified on the rating plate & only to an earthed socket. To avoid circuit overload do not operate another high wattage appliance on the same circuit.
- Never pull the cord to disconnect from the socket, always remove by grasping the plug.
- Do not lift the appliance by electric cord or supply hose.
- Always disconnect the appliance from the socket when not in use.
- Do not operate this appliance if the cord has been damaged or if it has been dropped, it must be inspected by a qualified person, (electrician) for examination and repair.
- Always keep the kettle out of reach of children and always ensure that children are supervised when the kettle is switched on.
- During use always position the power base on a stable and even surface, always place the kettle on the power base.
- Do not allow the power cord to touch the hot surface.

- Burns can occur from touching hot parts, hot water and steam. Use caution when using this appliance. When the kettle is in use it will become hot. Only handle by its handle.
- Never use the kettle facing towards other people as the hot steam can cause burns.
- Never leave the kettle unattended when it is switched on.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or other qualified electrician to avoid hazard.
- This kettle is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Never Over fill the kettle.
- Do not use the kettle with wet hands.
- Do not boil the kettle when it is empty.

Before you use the kettle for the first time, remove the base from inside, then fill the kettle and boil the water. (follow instructions below for boiling) and empty the water.

This kettle comes with a washable filter, to remove the filter open the lid and slide the filter upwards. Rinse under clear clean water and return into kettle.

To operate the kettle simply plug the base into your wall socket and switch on. Fill kettle up to desired water level, place onto base. Then push the switch, (located on rear back side of kettle), into the down position. The Red light will come on indicating that the water is now boiling. The kettle will automatically switch off when the water is boiled.

CLEANING INSTRUCTIONS

Before cleaning, always disconnect from the mains and allow kettle to cool.

WARNING: NEVER IMMERSE THE KETTLE OR BASE IN WATER

- To clean the exterior, wipe with a soft damp cloth and the wipe dry with a soft cloth.
- Do not use scouring creams or powders.
- Remove stubborn stains with a cloth moistened with mild liquid detergent.
- From time to time, dependant on the nature of your water supply, you may need to clean off the scale on the inside of the Jug Kettle. You will have to do this in areas where the water is "Hard Water". We recommend that you use a well know branded DESCALER for this. Please follow the descaler instructions when doing this.

PLUG:

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is earthed.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



Imported by Benross®
L24 9HJ UK

MADE IN P.R.C