


**MateStar<sup>®</sup> PLATINUM**  
Quality & Style

**INSTRUCTION MANUAL**

**Model No:PLM-M350W**

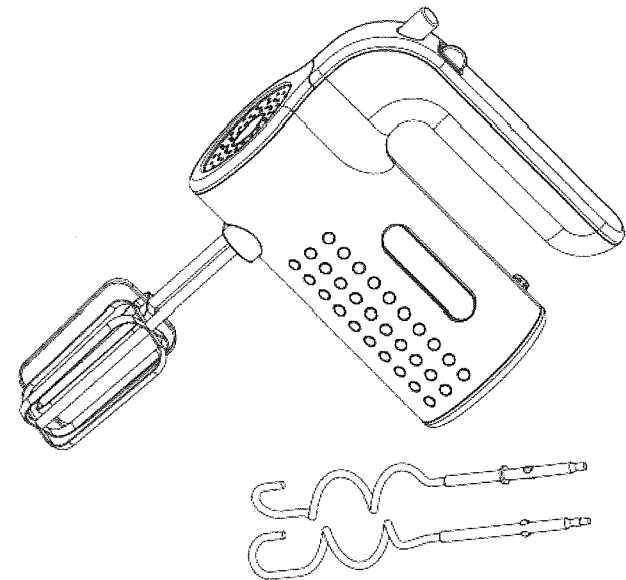

**220-240V~50Hz 350W**


FIRST PAGE :

INSTRUCTION FOR USE

YDHM-003 HAND MIXER

### DESCRIPTION

1. ejector
2. speed buttons & On/ off switch
3. housing
4. slots
5. beaters
6. dough hooks

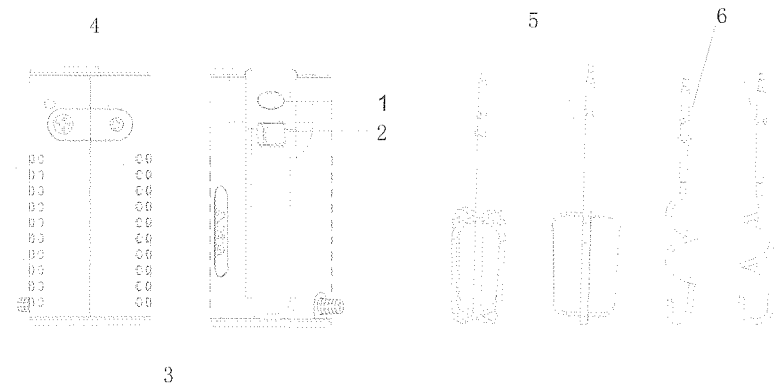

### Important safeguards

Before using your new hand mixer, read the instructions in this booklet. Find a place to keep this booklet handy for future reference.

Make sure that the operating voltage indicated on the appliance is the same as supply voltage in your home.

**When using electrical appliances, basic safety precautions should be followed, including:**

- This appliance is not intended for use by persons(including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- To protect against the risk of electric shock, do not immerse any part of this appliance into water or any other liquid.
  - Never leave the appliance unattended when in use. This appliance is not intended for use by children or disabled person without supervision.
  - Unplug from outlet while not in use, before putting on or taking off parts and before cleaning.
  - Avoid contact with the moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters, dough hooks, blade of the blender foot during operation to reduce the risk of injury to person and/or damage to the hand mixer.
  - Do not operate any appliance with damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact your customer service .
- Do not let the cord hang over edge of table or counter or touch hot surfaces including the stove.
- Never fit accessories with different functions at the same time (dough hooks and beaters etc.).
  - Do not use this appliance outdoors or for commercial purposes. This unit is intended for household use only.
  - Remove beaters from hand mixer before washing.

- Do not allow the power cable to hang down within reach of children.
- Close supervision is necessary when any appliance used near children.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.

#### **Before first use**

- Carefully unpack the hand mixer and remove all packaging material.
- Clean the various accessories of your appliance in warm soapy water, rinse and dry thoroughly before use.

#### **Instruction for use**

- Be sure speed control is in the "off" position and the appliance is unplugged from an electrical outlet.
- Insert beaters/dough hooks one at a time, by placing stem end of beaters/dough hooks into the opening on the bottom of the mixer. Turn beater slightly and push in until it clicks into the position.
- Plug into appropriate outlet.
- Place the ingredients into a bowl suitable for mixing purposes, grip the mixer handle, and position the beaters in the centre of the food to be mixed.
- Press the speed buttons while mixing, until the desired speed is

reached.

- Depending on the model, the unit may be equipped with a turbo button, which allows you instant access to the full power of your appliance.
- When you have finished using it, set the speed control switch to "off".
- Unplug the appliance.
- While pressing the release button, pull out the beaters dough hooks.

**Caution:**

- Do not continuously operate the mixer too long. The motor may overheat. Do not allow the mixer to operate more than 2 minutes.
- Never wash the motor housing in water.
- Be sure the control knob is turned to position "off" and cord is removed from electrical outlet before taking out the attachments from housing.

**Speed control guide**

Listed are suggested speeds and mixing tasks. Adjust for personal preference.

Speed	Mixing Tasks
1	Stir/blend. Use this speed to fold ingredients into the mixture such as coconut, chocolate chips, nuts and cheese.
2	Incorporate dry ingredients into wet ingredients, flour into liquids. Mix cake and pancake batter.

3	Blend heavy mixtures such as cookie dough, mashed potatoes. Mix muffins and breads; combine heavy ingredients such as cream cheese.
4	Blender butter and sugar, prepare icings, fluffy frostings and candies.
5	Whip cream. Use to create a light fluffy texture. Whip egg whites and meringues.
TURBO	Press the TURBO button from any speed setting to give the hand mixer a short boost of power.

**Caution:** Do not use turbo feature for more than 2 minutes at a time as the motor may overheat and cause damage to the unit.

**Cleaning the appliance**

- Before cleaning switch off and unplug the cord from the electrical outlet.
- Wash beaters in hot soapy water. Rinse well and dry.
- Wipe mixer body with a damp cloth.

**TECHNICAL DATA**

Operating voltage: 220-240V~50Hz

Power consumption: 350W

KB: 3 min on / 5 min off

PLEASE FILL YOUR DETAILS FOR FUTURE USE

**GUARANTEE CARD**

**CUSTOMER'S DETAILS**

NAME OF BUYER

ADDRESS

TELEPHONE


**DETAILS OF SHOP**

NAME OF SHOP

RECEIPT VOUCHER NO.

DATE OF PURCHASE


**APPLIANCE DETAILS**

TYPE OF APPLIANCE

MODEL NO.

SERIAL NO.
