

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance.

Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and allow to cool fully before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance must only be used and rested on a stable surface.

This appliance must only be used with the stand provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: The appliance emits very hot steam; always exercise extreme caution during use.

Warning: Hot surface - do not touch the hot section or heating components of the appliance.


Warning: Danger of scalding. Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply, drain the water tank and allow it to cool and dry sufficiently.

To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Description of Parts

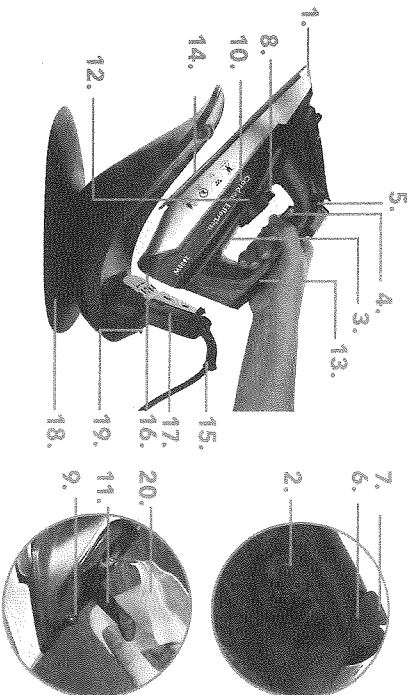

- | | |
|--------------------------------|--------------------------|
| 1. Two in One Cordless Iron | 11. Water tank cap |
| 2. Temperature control dial | 12. Max. fill mark |
| 3. Temperature indicator light | 13. Easy-grip handle |
| 4. Steam control trigger | 14. Ceramic soleplate |
| 5. Steam burst indicator | 15. Cord guard |
| 6. Steam burst button | 16. Heel rest |
| 7. Water spray button | 17. Power unit with cord |
| 8. Self-clean button | 18. Iron stand |
| 9. Spray nozzle | 19. Locking switch |
| 10. Water tank | 20. Measuring jug |

Instructions for Use

Before First Use

STEP 1: Before connecting to the mains power supply, wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

STEP 2: To remove any impurities that may have occurred during the manufacturing process, test the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material. Plug in and switch on the iron, place the iron onto the cloth and then push the steam burst button 2-3 times, waiting approx. 5 seconds in-between each burst.

Do not immerse the iron in water or any other liquid.

Note: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Caution: Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is positioned upright.

Warning: Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using as a Cordless Iron

- STEP 1:** Turn on the iron and place it on the iron stand, the temperature indicator light should turn on to signal that the iron is heating up. Make sure that the heel of the iron is pushed back and is secure.
- STEP 2:** When the temperature indicator light switches off after approx. 25 seconds, move the locking switch up to the cordless position. This will lock the power unit to the iron stand and release the iron.
- STEP 3:** Remove the iron from the iron stand and use as a cordless iron.
- STEP 4:** Put the iron back onto the iron stand to recharge regularly, failure to do so may cause the iron to leak. Recharge time is approx. 5 seconds.

Using as a Corded Iron

- STEP 1:** When the iron is on the iron stand, make sure that the heel of the iron is pushed back and is secure.
- STEP 2:** Move the locking switch to the corded position. This will lock the power unit to the iron.
- STEP 3:** Remove the iron from the iron stand and use as a corded iron.

Note: When the iron is not in use, keep the locking switch in the 'locked' position in the centre. This is ideal for storage.

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

- STEP 1:** Fill the water tank.
- STEP 2:** Plug in and switch on the iron.
- STEP 3:** Rotate the temperature control dial until the desired heat setting is reached. The iron will only produce steam when the temperature control dial is set to the 3-dot heat setting.
- STEP 4:** Select the desired steam setting by pressing the steam control trigger until either '1' or '2' is visible on the steam setting indicator. The steam setting can be switched off at any time by pressing the steam control trigger until it reaches '0'.
- STEP 5:** After use, rotate the temperature control dial to the 'Off' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

Note: Allow the iron to reach the desired heat setting before use, not doing so may cause water to drip from the soleplate.

Warning: Never leave the iron's ceramic soleplate resting on fabric for any longer than 15 seconds.

If ironing with steam for prolonged periods, it is advisable to use the iron as a corded iron.

Ironing without Steam

For removing creases from more sensitive fabrics, try ironing without steam.

- STEP 1:** Press the steam control trigger until the steam setting indicator is set to '0'.
- STEP 2:** Plug in and switch on the iron.
- STEP 3:** Rotate the temperature control dial until the desired heat setting is selected.
- STEP 4:** Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

Vertical Steam Ironing

The steam burst button can also be used to vertically steam curtains and other hanging garments. It is recommended to do this on the corded setting.

- STEP 1:** Hang up the item to be vertically steamed.
- STEP 2:** Fill the water tank.
- STEP 3:** Plug in and switch on the iron.
- STEP 4:** Rotate the temperature control dial until the 3-dot heat setting is selected; the higher the temperature, the more powerful the steam.
- STEP 5:** Hold the iron approx. 15 cm away from the item and press the steam burst button to remove any creases, waiting approx. 5 seconds in-between each burst.

Water Spray Function

The water spray function can be used to help to remove stubborn creases on heavier fabrics. For further details please see the online instruction manual.

Self-clean Function

The self-clean function removes limescale and impurities from within the ceramic soleplate. It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area. For further details please see the online instruction manual.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place. Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage.

Specifications

Product code: BEL0747N Output: 2600 W
Input: 220-240 V ~ 50/60 Hz Water tank capacity: 300 ml

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions). Go to www.beldray.com/manuals.html and search **BEL0747N** to access the instruction manual for your product.

*To be eligible for the extended guarantee, go to www.beldray.com/guarantee-registration.html and register your product within 30 days of purchase.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



FULL INSTRUCTION MANUAL AT
www.beldray.com/manuals.html
PRODUCT CODE: **BEL0747N**

Beldray[®] est. 1872

TWO IN ONE
CORDLESS IRON

QUICK START GUIDE

Find us on **f**

www.facebook.com/Beldray

Manufactured by:

UP Global Sourcing UK Ltd,
UK, Manchester, OL9 0DD.

Germany, 51149 Köln,
MADE IN CHINA.

www.beldray.com

CD200320/MD150221/V2