



# Fast Boil Kettle

## Instruction Manual



Item No. 39919 / 39909

# IMPORTANT! SAFETY INSTRUCTIONS:



**READ THIS MANUAL BEFORE USING THIS APPLIANCE.**



**WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY**

1. **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
2. **Always check the mains voltage corresponds to the voltage on the rating plate.**

## IMPORTANT SAFETY INFORMATION:

- If the supply cord is damaged it must only be repaired or replaced by a suitably qualified person.
- Do NOT position appliance where it can be reached by children.
- Extra caution is necessary when used near children or when left unattended.
- The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance.
- Cleaning and user maintenance by children must not be carried out without supervision.
- Children of less than 3 years should be kept away unless continually supervised.
- Children aged from 3 years and less than 8 years shall only switch the appliance on/off provided it has been installed in its intended normal operational position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or carry out user maintenance of the appliance
- This appliance is for household use only and not commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury

- If the product or its supply cord is damaged do not use and consult a qualified person for repair or dispose of responsibly.
- Always unplug the appliance after use.
- Store the appliance out of reach of children when not in use.
- Store in a clean dry storage area when not in use.
- Always ensure any vents or outlets are clear from blockages which may impact on the products function or safe use.
- Always unplug this product from the mains by pulling on the plug not the power cable.
- Always unplug before cleaning.
- Only use a soft cloth with mild soapy water to clean this product. Do not submerge this product in water or any other liquid.
- Do not use the appliance for other than its intended use.
- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance without anything in it to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse the cord, plugs or kettle in water or other liquids.
- While water is boiling, or just after the water has been boiled, avoid contacting with the steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful of refilling when the kettle is hot.

- Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Do not touch the hot surface. Use the handle or the button.
- The attached base cannot be used for anything other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy. Do not let the children play with it.
- The kettle is for household use only. Do not use outdoors.
- The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock, or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance for anything other than intended use.
- The kettle can only use with the stand provided.
- If the kettle is overfilled, boiling water may spill out.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance is intended to be used in households and similar environments such as:
  - Staff kitchen areas in shops, offices, and other working environments.
  - Farmhouses.
  - By clients in hotels, motels, and other residential type environments.
  - Bed and breakfast type environments.
- Save these instructions.

## KNOW YOUR KETTLE:



### Before Using Your Kettle

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water twice. Wipe the surface with a damp cloth.

**NOTE:** The max capacity of kettle is 1.5L.

### Using Your Electric Kettle

1. Place the kettle on a flat surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing down on the lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the switch and the indicator will light up; the kettle then starts to boil the water. The kettle will switch off automatically once the water has boiled. If necessary, it will take you 30 seconds to wait before pressing the switch again to re-boil the water. You may shut off the power by lifting the switch up or directly lift the kettle from the power base at any moment to stop the boiling process.

**NOTE:** Ensure that the switch is free of obstructions and that the lid is firmly closed, the kettle will not turn off if the switch is being constrained or if the lid is open.

5. Lift the kettle from the power base and then pour the water.

**NOTE:** Operate carefully when pouring the water from your kettle as boiling water may result in scalding, besides, do not open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

**NOTE:** Always disconnect the power supply when not use.

### **Boil-Dry Protection**

Should you accidentally let the kettle operate without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

### **Cleaning and Maintenance**

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner, never use an abrasive cleaner.
3. Remember to clean the filter at intervals. For easier cleaning, detach the filter by pressing down the tab of filter inside the kettle and then replace it after cleaning.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent damaging the appearance.

4. When not in use or in storage, the power cord may be wound under the base of the kettle.

### **Removal of Mineral Deposits**

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle and cause the kettle to run less efficiently. You can use the buy a kitchen appliance descaler and follow the instructions on the package of the descaler. Alternatively, you may follow below instructions using white vinegar.


1. Fill the kettle with 3 cups of white vinegar, then add water to cover the bottom of the kettle completely. Leave the solution in the kettle overnight.
2. Discard the mixture from the kettle. Then fill the kettle with clean water to the maximum position, boil it and then discard the water. Repeat several times until the odour of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

### **PLUG:**

- This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
- The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
- If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
- If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
- This appliance is earthed.



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk).

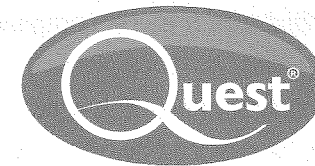

Imported by Benross® L24 9HJ



Made in P.R.C