



2 Slice Toaster

Instruction Manual



Item No. 39939 / 39929

IMPORTANT! SAFETY INSTRUCTIONS:



READ THIS MANUAL BEFORE USING THIS APPLIANCE.



WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY


- 1. The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
- 2. Always check the mains voltage corresponds to the voltage on the rating plate.**

IMPORTANT SAFETY INFORMATION:

- If the supply cord is damaged it must only be repaired or replaced by a suitably qualified person.
- Do NOT position appliance where it can be reached by children.
- Extra caution is necessary when used near children or when left unattended.
- The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance.
- Cleaning and user maintenance by children must not be carried out without supervision.
- Children of less than 3 years should be kept away unless continually supervised.
- Children aged from 3 years and less than 8 years shall only switch the appliance on/off provided it has been installed in its intended normal operational position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or carry out user maintenance of the appliance.
- This appliance is for household use only and not commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.

- If the product or its supply cord is damaged do not use and consult a qualified person for repair or dispose of responsibly.
- Always unplug the appliance after use.
- Store the appliance out of reach of children when not in use.
- Store in a clean dry storage area when not in use.
- Always ensure any vents or outlets are clear from blockages which may impact on the products function or safe use.
- Always unplug this product from the mains by pulling on the plug not the power cable.
- Always unplug before cleaning.
- Only use a soft cloth with mild soapy water to clean this product. Do not submerge this product in water or any other liquid.
- Do not use the appliance for other than its intended use.
- Oversized foods, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
- Bread may burn; therefore, toasters must not be used near or below curtains and other combustible materials, they must be watched.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not attempt to dislodge food when toaster is in operation.
- Be sure to take the bread out carefully after toasting to avoid injuries.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not use the appliance outdoors.
- This appliance is intended to be used as a household domestic appliance only.

PRODUCT INTRODUCTION

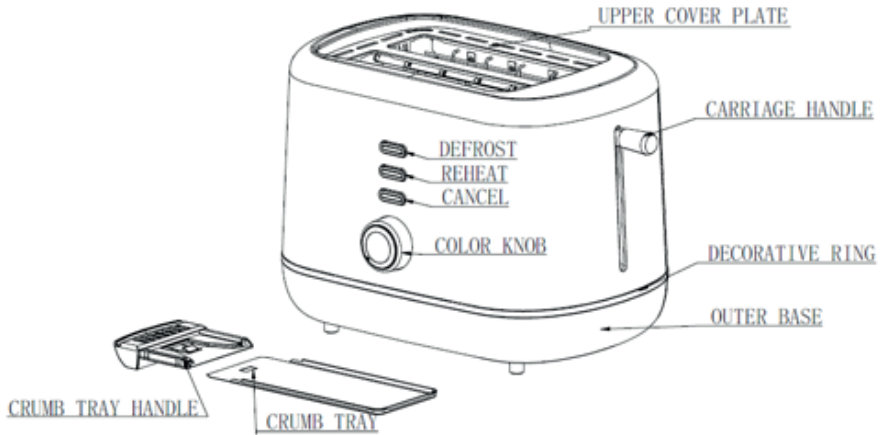

FIRST USE:

As there is manufacturing residue or oil remained in the toaster or heat element, it usually emits the odour for the first use. It is normal and will go away after several uses. Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, but without using any bread.

OPERATION:

1. Put the bread slice into the bread slot, with a maximum of two slices every time. Only regular sized slices can be placed into the bread slot.

Note: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.

3. Set colour control knob to your desired colour. There are 7 browning levels, the lowest is white and the highest is darkest. The bread slice can be toasted to a golden colour at position '3'.

Note:

1) If toasting only 1 piece of bread at a time (not 2) the bread will turn out darker.

2) If toasting multiple batches of bread continuously, the toasting colour for the latter bread is darker than the colour of previous cycle at the same level due to the toaster being hot from previous cycle.

4. Press carriage handle down vertically until it is positioned in place, the indicator of Stop will be illuminated, and toasting begins. Once the bread has been toasted to the preset colour, the carriage handle will automatically spring up, and you can remove the bread readily.

Note: The carriage handle can only be latched when the appliance connects to the power supply.

5. During the toasting process, you may observe the toasting colour. If it is satisfactory, you may interrupt the toasting process by pressing the Stop button at any time, but never lift carriage handle to stop toasting.
6. If the bread is frozen, set colour control knob to your desired colour. Press carriage handle down vertically until it is positioned in place, then press the DEFROST button and the DEFROST indicator will be illuminated. In this mode it will be toasted to your desired colour.
7. If you want to reheat the cold toasted bread. Press the carriage handle down vertically until it is positioned in place, then rotate the colour control knob to REHEAT setting. In this mode toasting time is fixed, so once the time is up, the carriage handle will automatically spring up and end the reheating process.

CAUTION:

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press Stop to stop toasting immediately and switch off the power supply.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. To achieve uniform colour we recommend that you should wait a minimum of 30 seconds between each toasting so that colour control can reset automatically.

CLEANING AND MAINTENANCE:

1. Disconnect the power supply before cleaning.
2. Wipe the outside with a soft dry cloth after the toaster cools down, never use harsh solutions.
3. Pull out the crumb tray on the bottom of the toaster by the crumb tray handle and empty it. If the toaster is used frequently, accumulated breadcrumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

PLUG:

- This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
- The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
- If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
- If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
- This appliance is earthed.



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

