


**BAUER™**  
PROFESSIONAL

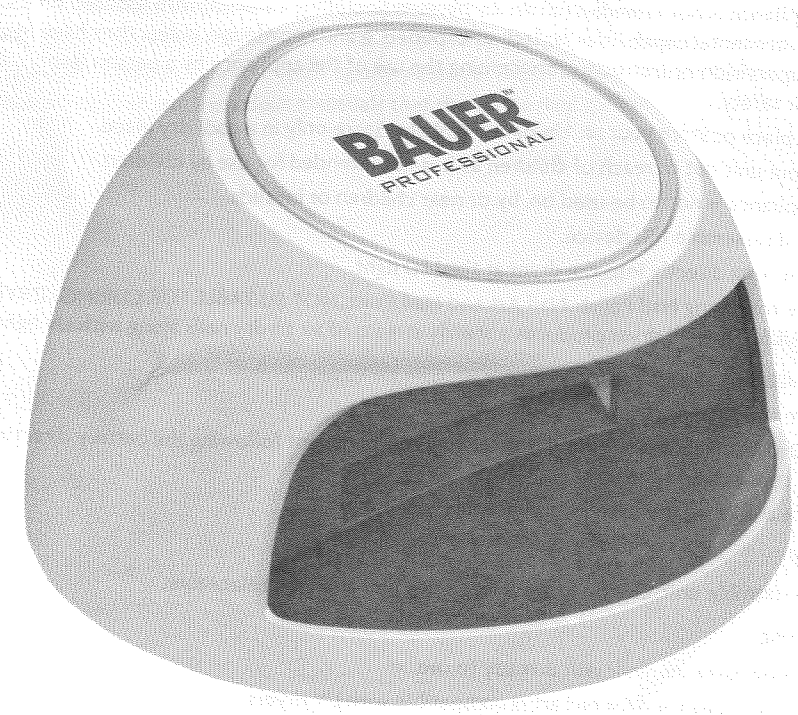

**UV** *Nail*  
*dryer*

Battery Operated

Please retain these instructions for future reference

## Instructions

### WARNINGS / IMPORTANT

1. Read the instruction manually thoroughly before using the device.
2. Use the Nail Dryer only for purposes described in this instruction book.
3. It is recommended for domestic/household use only.
4. For indoor use only.
5. Do not use in or around water.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
7. Do not place or store your unit in direct sunlight. Store only in a cool dry place.
8. Keep your unit out of reach of children as it is not intended for use by children.
9. This appliance is not to be used on, by or near children or invalids.
10. Do not disassemble this device.
11. Avoid looking directly into the dryer at the LED light.
12. Suitable for drying Nail Polish, Nail Art and Nail Paint, NOT SUITABLE FOR CURING/DRYING GEL NAILS. The nail dryer produces a steady stream of air to dry nails along with UV light.

### BATTERY INSTALLATION

1. Remove the battery cover
2. Insert 2 x AA alkaline batteries in the battery compartment following the battery direction sign as imprinted on the unit.
3. Replace and close the battery cover securely.

### LED LIGHT

Do not disassemble unit, LED bulbs are long lasting and are non replaceable.

### HOW TO USE

After inserting batteries, your unit is ready to use.

1. Check your polish and/or nail art is compatible with UV dryers.
2. Apply nail polish or nail art as directed by individual product instructions to finger or toe nails.
3. Place fingers or toes onto the base plate of the unit, press down lightly to activate the UV light.
4. Drying will take 3-5 minutes (approx) per coat.
5. Avoid looking directly into the dryer at the light.
6. Remove fingers or toes, unit will automatically switch off.

### HOW TO CLEAN

Clean the appliance after each use to ensure continued performance.

DO NOT submerge the unit in liquid.

DO NOT use abrasive liquids or detergents to clean the outer or inner areas of the unit.


Wipe unit with a damp clean cloth, dry thoroughly with a soft dry cloth.

## INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

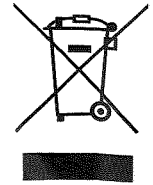

# **BAUER™**

**PROFESSIONAL**



Importer UK: Benross Marketing Ltd, Liverpool L24,9HJ  
Importer EU: Benross Marketing Ltd, Italeiei 1-2000 Antwerp Belgium.  
Consumer Services: E: [afterservice@benross.com](mailto:afterservice@benross.com). T:+441518327600.  
Made in P.R.C.