

IMPORTANT! SAFETY INSTRUCTIONS:



READ THIS MANUAL BEFORE USING THIS APPLIANCE.



WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY



- The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.
- Always check the mains voltage corresponds to the voltage on the rating plate.

CAUTION:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without adult supervision.

WARNING:

KEEP AWAY FROM WATER. DO NOT USE THIS APPLIANCE NEAR TO BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.




- 1) Take care to avoid contact between the hot surface of the appliance and the skin of the face and neck.
- 2) Do not place the appliance on any heat sensitive surface when using, allow to cool before storing away.
- 3) Only store, when the unit is unplugged and completely cool.
- 4) When storing the unit make sure it is unplugged, do not wind the supply cord around the appliance.
- 5) This appliance is not intended for commercial use.
- 6) Close supervision is necessary when any appliance is used by, on or near children or people with a disability. Store out of children's reach.
- 7) Do not leave the appliance unattended when plugged in. Always unplug this appliance from the electrical outlet immediately.
- 8) Do not use if the appliance or the cord is damaged, or it is not working properly, or it has been dropped into water.
- 9) Do not reach for the appliance that it has fallen into water. Switch off at the socket and unplug it immediately.
- 10) Always ensure the voltage to be used corresponds to the voltage on the unit.
- 11) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 12) Keep the cord away from heated surfaces. Do not pull, twist, or wrap cord around the appliance, even during storage.
- 13) Never block the appliance outlets or place it on a soft surface, such as a bed or couch.
- 14) Do not use outdoors or near to flammable materials

- 15) Do not use an extension cable to operate appliance.
- 16) Do not plug this appliance when your hands are wet.

FEATURES:

- A) On/ Off Switch
- B) Indicator light
- C) Cord sheet without tangling the cord
- D) Ceramic coating plates with comb

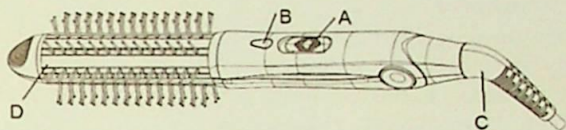

- Advanced heating component • On/Off switch
- Power light indicator • 200°C temperature range
- 360° free swivel power cord with hook

SUPER STYLING GUIDE

HOW TO USE

For best results, wash, comb and dry hair until just damp to touch - although the Tourma Pro Duo Styler can be used for touch ups at any time.

- 1) Fully unwind the mains cable.
- 2) Plug the appliance into the mains socket and switch on the product.
- 3) Wait for 1-2 minutes to allow the appliance to reach its working temperature.
- 4) Press the UNLOCK button to release the plates to straighten hair.
- 5) Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with underneath layer first.
- 6) Take a small section of hair and pull hair down and away from your scalp and hold it taut.
- 7) Starting at the root, clamp hair firmly between the plates and run the straightener down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time.
- 8) Repeat with all the sections of your hair.
- 9) To curl, close the straightener plates together & switch the button to LOCK
- 10) Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with underneath layer first.
- 11) Wrap a section of the hair around the bristles pointing the barrel downwards and hold for 5-10 seconds until your hair reaches the desired curl effect. Repeat with all the sections of your hair.
- 12) When you are finished styling, slide the on/off switch to turn the appliance off, unplug and allow it to completely cool down before cleaning or storing.

WARNING


The appliance will get very hot within a few seconds and should not be placed in contact with the skin after it is turned ON. The special application of the appliance will result in an extremely hot surface when the high setting is chosen. Always do a test curl before using the tong to insure the proper setting for your hair type.

CARE AND MAINTENANCE

- 1) The appliance must be unplugged before cleaning.
- 2) Let the appliance cool down before touching or cleaning.
- 3) Use the damp cloth to clean the plates and housing.
- 4) Do not use any harsh detergents, abrasives, solvents or cleaners. Never immerse in water to clean.
- 5) Dry thoroughly before use.
- 6) Do not replace the mains supply lead into the appliance - always use an authorized representative or qualified technician.

CLASS II DOUBLE INSULATED APPLIANCES (2 CORE)

PLUG:

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with a UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is a Class 2 appliance protected by double and reinforced insulation and does not require earthing. Class2 appliances are indicated by this  symbol marked on the appliance rating plate.

INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

GENERAL CARE

All products with working components will over time react to general wear and tear. Lack of use for long periods of time may also affect the products performance. Storage conditions may affect performance when a product is then used.

We recommend that your product is periodically checked to ensure it remains working correctly and safe to use.

Never attempt to repair a product. All services and/or repairs should only be undertaken by a qualified individual or company.

BAUER
BENROSS HOUSE
BRIDGE HALL INDUSTRIAL ESTATE
SPEKE HALL ROAD, LIVERPOOL
L24 9WD



Imported by BENROSS L24 9WD
Made in P.R.C. ©2019