

IMPORTANT! SAFETY INSTRUCTIONS:



READ THIS MANUAL BEFORE USING THIS APPLIANCE.



WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY

- **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
- **Always check the mains voltage corresponds to the voltage on the rating plate.**
- Only use the appliance for domestic purposes and household or similar applications.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- Keep the appliance and its cord out of reach of children.
- This device is not a toy.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

THERE IS A DANGER OF SUFFOCATION!

- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided with this appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Only use this appliance on a heat resistant surface
- Never wind the cord around the appliance and do not bend it
- Ensure that the power cord does not come into contact with hot parts of this unit.
- Make sure the appliance has cooled down before cleaning and storing it.

- The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Always remove the plug from the wall socket when the appliance is not in use.

- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use only.
- Never modify this appliance in any way

ATTENTION: IN CASE OF OVERHEATING, THE SAFETY INTEGRATED THERMOSTAT, WILL AUTOMATICALLY, SHUTDOWN THE DEVICE (AND LIGHT).

- Unplug the unit.
- Wait 10 to 20 seconds and reconnect the device, It will be ready for new operation and use.



Accessible surfaces may be very hot when the appliance is operating. Never touch these parts of apparatus to avoid burning injuries.

BEFORE FIRST USE

- Clean the grill and the accessories. It is recommended to heat up the grill for about 10 minutes without any foodstuff in order to eliminate the grease that may have adhered during manufacture and the «new» smell.
- Ventilate the room during this period.

USE

- Unroll the power cord completely.
- Insert the plug with thermostat into the appliance and make sure the thermostat is on its minimum position and put the plug in an earthed power socket.
- Connect the apparatus in a correct socket-outlet, to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat surface, (heat resistant).
- Select the cooking temperature using the thermostat dial. The pilot light will come on, indicating that the appliance is heating.

- Preheat the grill to reach the ideal cooking temperature. When the appliance reaches the desired temperature, the pilot light will go out.
- Now put the foodstuffs onto the grilling surface.
- The grilling times vary according to the nature of the foodstuffs and to your personal taste.
- When grilling is finished switch off the grill and disconnect it.



PRACTICAL HINTS

- Frozen food should always be thawed before it is grilled.
- To grill meat, put the thermostat in its maximum position and preheat the grill. For other ingredients, choose the temperature accordingly.
- Never scratch the special non-stick coating. Use a wooden spatula or a heat resistant plastic spatula.

CLEANING AND CARE

- Before cleaning, put the thermostat in its minimum position and make sure that the plug has been removed from the mains supply socket.
- Let the grill to cool down thoroughly and unplug the thermostat from the appliance.
- Never immerse the appliance or the plug in water or any other liquid. However, should there be water on the electric connection, wait until the appliance is completely dry before using it again.
- Wipe the outer surfaces of the grill with a damp cloth and dry afterwards.
- The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.
- Do not use harsh abrasive cleaners as these might damage the non-stick coating.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

SPECIFICATIONS

Power supply	220V~240V 50Hz
Power	2000W
Norm	Class I

CAUTION


- If this appliance plug or power cord is damaged do not use and dispose of responsibly.
- Repairs or maintenance of electrical appliance must only be carried out by a suitably qualified person.

PLUG:

- 1.This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
- 2.The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating
- 3.If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
- 4.If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
- 5.This appliance is earthed.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

 This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

