 




Hand Blender Instruction Manual

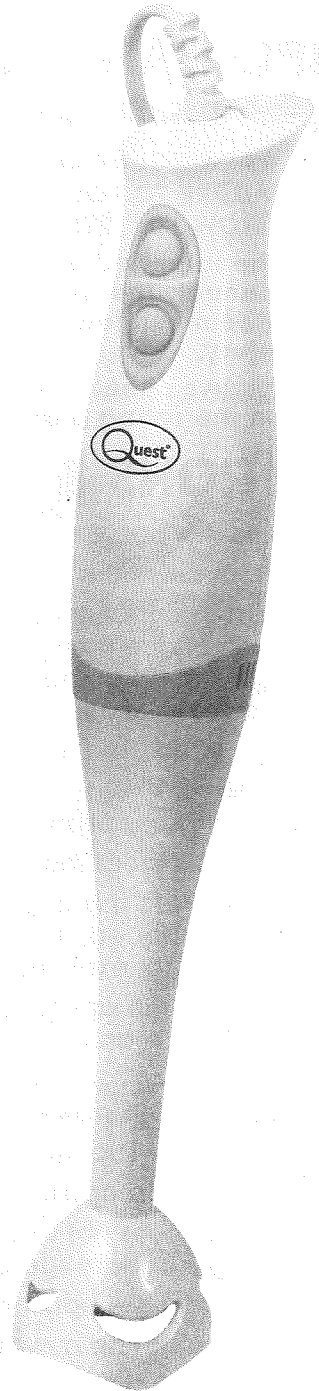

Item No. 35090

IMPORTANT! SAFETY INSTRUCTIONS:

READ THIS MANUAL BEFORE USING THIS APPLIANCE.

WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY

- The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.
- Always check the mains voltage corresponds to the voltage on the rating plate.

 
CAUTIONS & WARNINGS

- Only use this appliance for its intended purpose, (Domestic use only).
- Do not immerse the appliance into water or any other liquid.
- Connect the appliance only to an alternating current of the voltage specified on the rating plate & only to an earthed socket. To avoid circuit overload do not operate another high wattage appliance on the same circuit.
- Never pull the cord to disconnect from the socket, always remove by grasping the plug.
- Do not lift the appliance by the electric cord.
- Always disconnect the appliance from the socket when not in use.
- Do not operate this appliance if the cord has been damaged or if it has been dropped, it must be inspected by a qualified person, (electrician) for examination and repair.
- Always keep the appliance out of reach of children and always ensure that children are supervised when the appliance is switched on.
- Do not allow the power cord or hose to touch the hot surface.
- Never twist the supply cord during use.
- Never leave the appliance unattended when it is switched on.
- This appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Never handle the appliance if your hands are wet.
- Avoid contact with any moving parts.
- Ensure that all hair is tied up when using this appliance.

- Ensure that no clothes are hanging down when using this appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children.
- Take care when handling the attachments as they are sharp.
- Misuse of this appliance may result in personal injury.
- This appliance should not be used by children. Keep the appliance and its cord out of reach of children.

USING YOUR STICK MIXER


1. Simply plug the blender into power outlet. 220-240V/50Hz
2. Lower the mixer into food and depress the speed switch at the top of the motor unit as indicated, (see picture)
3. The mixer will only turn on if the low speed switch or high speed switch are depressed.

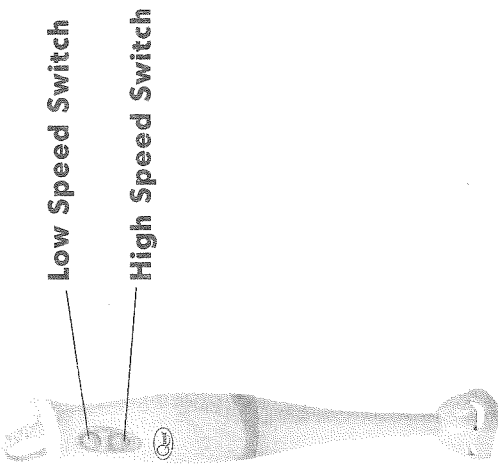


HOW TO CLEAN

1. On completion of using your appliance it is strongly recommended that you clean the blades immediately. This will remove any clinging food from the blades.
 2. Unplug the appliance.
 3. Clean the body of the appliance using only a soft, damp cloth.
 4. To clean the blades turn the lower part of the stick in a clockwise direction to release then you can immerse the blades in water to clean.
- CAUTION: THE ATTACHMENT IS VERY SHARP!**
5. Make sure the base is completely dry before re-attaching to the upper body.

PLUG:

 1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed
2. The plug is fitted with a UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is a Class 2 appliance protected by double and reinforced insulation and does not require earthing. Class2 appliances are indicated by this  symbol marked on the appliance rating plate

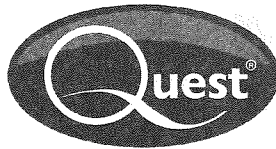

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



Imported by Benross®

MADE IN P.R.C