

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not pull or carry the appliance by its power supply cord.


Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

 **Caution:** Hot surface – do not touch the hot section or heating components of the appliance. Take care not to pour water on the heating element.

WARNING: KEEP THE APPLIANCE AWAY FROM FLAMMABLE MATERIALS..

CARE AND MAINTENANCE

Before attempting any cleaning or maintenance, switch off and unplug the snack maker from the mains power supply and allow it to fully cool.

STEP 1: Wipe the snack maker housing with a soft, damp cloth and dry thoroughly.


STEP 2: Remove baked on food by applying a small amount of warm water mixed with a mild detergent to the non-stick plates and

then wipe them clean with a paper towel or nonabrasive scourer.

Do not immerse the snack maker in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the snack maker, as this could damage the surface.

DESCRIPTION OF PARTS

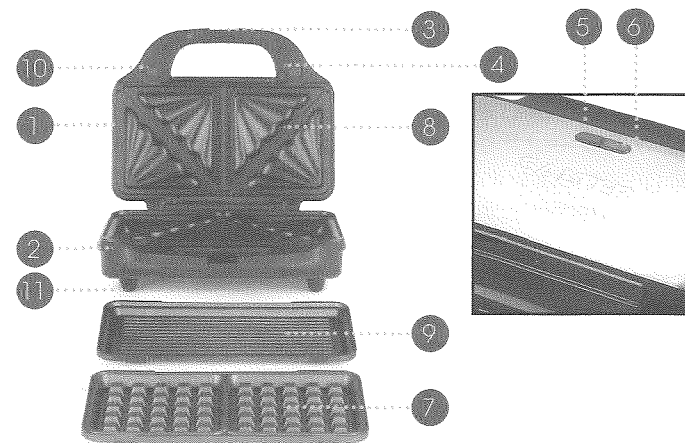

- | | |
|--------------------------------|------------------------------|
| 1. Upper housing | 7. Waffle non-stick plates |
| 2. Lower housing | 8. Sandwich non-stick plates |
| 3. Locking latch | 9. Griddle non-stick plates |
| 4. Cool-touch handle | 10. Plate release buttons |
| 5. Red power indicator light | 11. Non-slip feet |
| 6. Green ready indicator light | |

INSTRUCTIONS FOR USE

BEFORE FIRST USE

Before connecting to the mains power supply, wipe the snack maker housing with a soft, damp cloth and dry thoroughly.

Do not immerse the snack maker in water or any other liquid.

USING THE XL 3 IN 1 SNACK MAKER

STEP 1: Before each use, carefully apply a thin coat of cooking oil to the non-stick plates, rubbing it in carefully with a paper towel. This will help to prolong the life of the non-stick coating and stop the snack from sticking.

STEP 2: Prepare the ingredients to be cooked.

STEP 3: Install the required non-stick plates, following the instructions in the section entitled 'Installing or Changing the Non-Stick Plates'.

STEP 4: Plug in and switch on the snack maker at the mains power supply. The red power indicator light will illuminate to signal that the snack maker has been switched on and is heating up.

STEP 5: Preheat the snack maker for approx. 4 minutes; the green ready indicator light will illuminate once the required temperature has been reached.

STEP 6: Using heat-resistant gloves, carefully release the locking latch and open the lid.

Add the prepared ingredients into the centre of each lower non-stick plate and then carefully close the lid.

STEP 7: Cook for the required time; check periodically by carefully opening the lid. If needed, the snacks can be baked a little while longer, until they are cooked to preference.

STEP 8: Once cooking is complete, use heat-resistant gloves to carefully open the lid and then remove the snacks with a heat-resistant plastic or wooden spatula.

STEP 9: Switch off and unplug the snack maker from the mains power supply.

STEP 10: Leave the lid open and allow to cool.

Note: Always preheat the non-stick plates before starting to cook.

During use the green ready indicator will cycle on and off to signal that the snack maker is maintaining the temperature. Do not overfill the non-stick plates; the ingredients may expand whilst cooking. When baking multiple batches of snacks, close the lid after removing each batch to maintain the heat.

Caution: Exercise caution during cooking; the snack maker will emit steam.

WARNING: THE SNACK MAKER AND COOKING PLATES GET VERY HOT DURING USE; ALWAYS USE HEAT-RESISTANT GLOVES TO AVOID INJURY.

STORAGE

Before storing in a cool, dry place, check that the snack maker is cool, clean and dry.

Never wrap the cord tightly around the snack maker; wrap it loosely to avoid causing damage.

SPECIFICATIONS

Product code: EK2143

Input: 220-240 V ~ 50/60 Hz

Output: 900 W

Note: When using the sandwich toaster for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the sandwich toaster.

If this product does not reach you in an acceptable condition, please contact our Customer Services Department at www.saltercookshop.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions). Go to www.saltercookshop.com and search **EK2143** to access the instruction manual for your product.

*To be eligible for the extended guarantee, go to www.saltercookshop.com and register your product within 30 days of purchase.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



FULL INSTRUCTION MANUAL AT
www.saltercookshop.com/instruction-manuals.html
PRODUCT CODE: **EK2143**

SALTER®

XL 3 in 1 Snack Maker

QUICK START GUIDE

Find us on 

www.facebook.com/SalterCookshop

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.
MADE IN CHINA.

www.saltercookshop.com

CD210520/MD000000/V1