


# **MateStar<sup>®</sup> PLATINUM**

**USER MANUAL**

**SIEAM IRON**

**PLM-2063B**

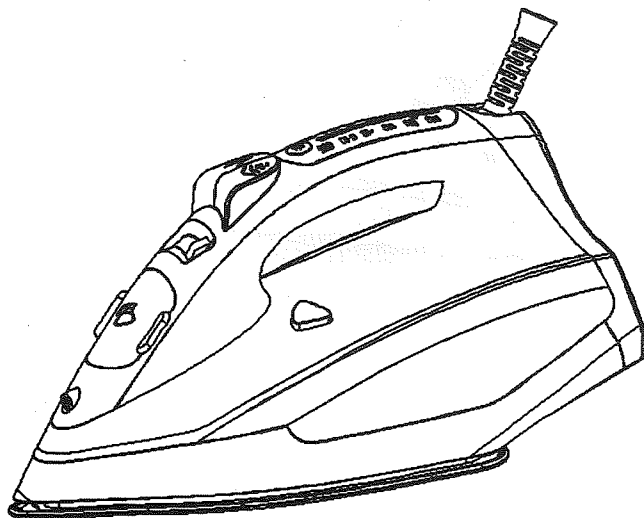


Please read the instruction manual carefully before using the appliances and keep it for future use.

---

**IMPORTED BY: ROMICO J.T. TRADERS LTD**  
**11 DIOS STREET, 1056 NICOSIA-CYPRUS**  
**MADE IN P.R.C**  
**WWW.MATESTAR.EU**

**Characteristics and structure:**

The product has many functions such as temperature regulating, spraying, dry ironing, variable steam, bursting steam, etc. And it with characteristics: luxury shape, high heat efficiency, easy using, good ironing result, work saving and time saving, and so on.

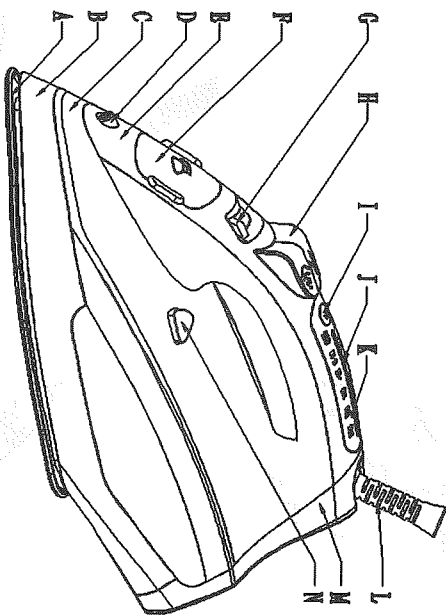

- |               |                               |
|---------------|-------------------------------|
| A: Soleplate  | H: Spray & Burst steam button |
| B: Skirt      | I: Temperature button         |
| C: Water tank | J: Pilot/ auto off light      |
| D: Spray ASM  | K: Top-cover ornament         |
| E: Top cover  | L: Cord guard                 |
| F: Fill cover | M: Rear cover                 |
| G: Steam knob | N: Clean button               |

**Filling water:**

1. Before filling water, please pull out the plug first.
2. Set the steam control to the minimum position.
3. Pull down the cover of water filling mouth, then fill water.

**Spraying:**

Press the spraying button, steam will be sprayed out from the spraying nozzle. At that time, you should keep enough water in the water tank.

**Steam ironing:**

1. Use steam ironing, turn the steam control to minimum position and set the temperature control at the "... " or MAX position.
2. After the indicator goes out, turn the steam control to the suitable position, steam will be sprayed, ironing can start.

**Bursting steam:**

Set the temperature control at the "... " or MAX position, then press down the bursting steam button, the base plate will spray out bursting steam.

**Dry ironing:**

Turn the steam control to minimum position ,set the temperature control to the suitable position, you can dry ironing.

**Self cleaning:**

First fill water, then Plug the iron into the mains, Set the temperature control to the maximum position , about 3 minute later, press the self clean button for about 1 minute, strong steam and hot water will be sprayed to clean the steam chamber. Use the function once every two weeks

**Anti-drip:**

This iron is equipped with a drip stop function: the iron automatically stops steaming when the temperature is too low to prevent water from dripping out of the soleplate.

**Anti-calc:**

The Anti-calc function filtrate the minerals from the water to prevent mineral residue build up at the steam chamber.

**AUTOMATIC SHUT OFF:**

If the iron is switched on and not moved for a period of 8 minutes while standing on its heel or 30 seconds while standing on the soleplate, an internal safety feature will switch the iron off and the auto-shutoff indicator

will blink. Move the appliance sharply to switch it on again.

**Storage:**

After using, pull out the plug, pour out the remaining water, turn the steam control to minimum, turn the temperature control to “min”, let the iron cool down, put the iron on the safe and dry place vertically.

**Attentions:**

1. Please read the owner's manual before use the product.
2. Use the distilled or boiled water only. Do not fill in with any other liquid except water.
3. The iron must not be left unattended while it is connected to the supply mains.
4. The plug must be removed from the socket-outlet before the water reservoir is filled with water.
5. When the iron used , must set stable surface.
6. When setting the iron on the support, be sure it should be stable.
7. The iron can't be used if it's broken or destroyed after falling down. The appliance is not be used by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
8. Children being supervised not to play with the appliance.

**Cautions:**

1. Make sure that the applied voltage is same as the rating voltage, and the socked has effective earth connection.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard.
3. This iron is for household only.
4. Do not immerse the iron into any liquid for cleaning.
5. Do not touch the hot metal part, hot water, or steam to avoid scalding.

**Main technical parameters:**

Type	Rated voltage	Rated frequency	Rated power
PLM-2063B	220-240V	50/60Hz	2200-2600W

**PLEASE FILL YOUR DETAILS FOR FUTURE USE**

**GUARANTEE CARD**

***CUSTOMER'S DETAILS***

**NAME OF BUYER**

**ADDRESS**

**TELEPHONE**


***DETAILS OF SHOP***

**NAME OF SHOP**

**RECEIPT VOUCHER NO.**

**DATE OF PURCHASE**


***APPLIANCE DETAILS***

**TYPE OF APPLIANCE**

**MODEL NO.**

**SERIAL NO.**
