

## **IMPORTANT! SAFETY INSTRUCTIONS:**



**READ THIS MANUAL BEFORE USING THIS APPLIANCE.**



**WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY**

- **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
- **Always check the mains voltage corresponds to the voltage on the rating plate.**

### **CAUTION**

- This appliance should never be left unattended when switched on or plugged in.
- Never use this appliance if it has a damaged cord or plug, or if it is not working properly.
- Do not pull, twist or wrap the cord around the appliance.
- Never drop or insert any object into any opening on this appliance.
- Never use the Hair Dryer in a bathroom or any area where it could be accidentally dropped into water or come into contact with water or liquid and do not use with wet hands.
- This appliance is for indoor use only.
- This appliance is for household use only.
- If the power cord is damaged, it must be replaced by the service agent or similarly qualified person or dispose of responsibly.
- Close supervision is required when this product is near children.
- The air inlets should never be obstructed.
- Connect the appliance only to an alternating current of the voltage specified on the rating plate & only to an earthed socket. To avoid circuit overload do not operate another high wattage appliance on the same circuit.
- This appliance can only be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

### **DANGER - TO REDUCE THE RISK OF ELECTROCUTION**

- Always unplug this appliance immediately after use.
- Do not use while bathing.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or any other liquid.
- Do not reach for an appliance that has fallen into water – unplug immediately from socket.

## **MAINTENANCE**

- Switch off, unplug from the mains and allow your Hair Dryer to cool down.
- Clean with a soft damp cloth and thoroughly dry with a soft cloth.
- Clean the air inlet filter from time to time using the same method as above.
- Store in a cool dry place and out of reach of children.

## **HOW TO USE YOUR HAIR DRYER**

1. Fully unwind the mains lead.
2. The Hair Dryer can be used with or without the Concentrator Nozzle or Diffuser.
3. Ensure the switch is set to off position before plugging into your mains supply.
4. Ensure that your hair is clear of the inlet filter. If the inlet filter becomes blocked the built-in thermal safety cut-off will be activated and the Hair Dryer will switch off. If this happens switch the Hair Dryer off and allow it to cool down completely. During this time the thermal cut-off switch will reset and your Hair Dryer will then be ready to use again.
5. Never use your Hair Dryer too close to your head as you can damage both your hair and scalp.
6. Adjust the desired blowing strength: Position 0: Off / Position 1: Half Power – medium temperature for gentle drying and styling / Position 2: Full Power – high temperature for quick drying.

 
## **HOW TO USE THE CONCENTRATOR NOZZLE**

1. Simply push the Concentrator Nozzle onto the Hair Dryer to fit.
2. The Concentrator Nozzle can be used with a brush to produce soft bouncy hair styles and to curl the ends of your hair. For shorter hair styles you can give your hair body by curling a section of hair around a small rounded brush and dry in the opposite direction to the growth. Use the Hair Dryer at a suitable setting, holding it near to the roots to give them extra lift. By using a flat comb you can protect your scalp from hot air – insert the teeth of the comb into your hair at the roots.

## **USING THE COOL SHOT FUNCTION**

The Cool Shot function can be used at any time by pressing the button. This temporarily cuts the heat off and gives a cool shot of air. This can be used to cool your hair during styling and helps to set your style. The Cool Shot function will only work whilst you hold the Cool Shot button down.

## **PLUG:**

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with 5 amp fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is a Class 2 appliance protected by double and reinforced insulation and does not require earthing. Class 2 appliances are indicated by this  symbol marked on the appliance rating plate.