

## **SAFETY INSTRUCTIONS**

- The device is used only for coffee, various cocktails, sauce vinaigrette, baby food, and milk shakes etc.
- Never insert your fingers or any other objects (hair, clothes, cooking utensils, knives, screw drivers etc.) near the axle when the appliance is in use.
- Read all the instructions carefully before you use the appliance and keep them for future use.

## **USING THE MILK SHAKE MAKER**

- The switch should be on the '0' position before attaching the power plug to a suitable 220~240 VAC mains supply.
- Turn the power switch (D) to "I" or "II" position, and in few seconds will get the expected results.
- Pour milk into the cup provided.  
Add flavored milk shake powder and sugar (or any other ingredients that you prefer to mix).
- Raise the cup to the shaft (B).
- The Milk Shake Maker should be switched on for not more than 1 minute on every operation. This will ensure the desired results.
- Turn the switch to the "0" position and let the Milk Shake Maker cool for approximately 1 minute.
- Always keep the Milk Shake Maker dry.

## **BEFORE USE**

- Ensure the packaging of this appliance is disposed of properly. Keep plastic bags away from babies and children.
- After you remove the device from its packing, clean it with a damp cloth.
- Never immerse the appliance in water, in order to clean it.

- Ensure that the main voltage rating of your power supply corresponds to the voltage requirements of the appliance.
- Place the device on a flat and dry surface.
- Make sure that all parts of the device are properly mounted before using the appliance.
- Do not switch the appliance on without the cup in place.
- Before using the device, please unfold the cord completely and make sure that it does not show any sign of damage.
- Do not use the device for more than 1 minute continuously. Be sure to always do a pause of 1 minute between each use.

### CLEANING THE MILK SHAKE MAKER

- Before cleaning, the switch must be in "0" position and disconnect the power plug from the mains supply.
- Do not immerse the Milk Shake Maker in water or other liquids. Simply wipe with a damp cloth.
- To clean the axle, pour water into the cup and switch on for a few seconds.
- Do not store the Milk Shake Maker immediately after use. It might still be hot. Allow to cool and then store in a safe place.

### STORAGE

- Store the Milk Shake Maker after it has cooled down gradually.
- When not in use, disconnect the Milk Shake Maker and store in a dry, safe place, out of reach of children.

### ATTENTION !

- Do not place the appliance on, near or in microwave oven, electric

oven or gas oven. Keep the appliance away from flammable objects or other heat source.


- The device should be used only by adults.
- Always supervise the device when it is in use.
- Always leave enough space around the device when it is in use, among other items. Do not place the device near flammable materials such as furniture, pillows, fabrics, curtains, etc.
- Never blend hot oil or any other hot liquid.
- Never blend fat.
- Do not add ingredients in the cup while the appliance is operating.
- Do not move the appliance while it is operating.

### NOTE:

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

### KNOW THE MILK SHAKE MAKER

- A. Body
- B. Axle
- C. Mixing cup
- D. ON/OFF switch

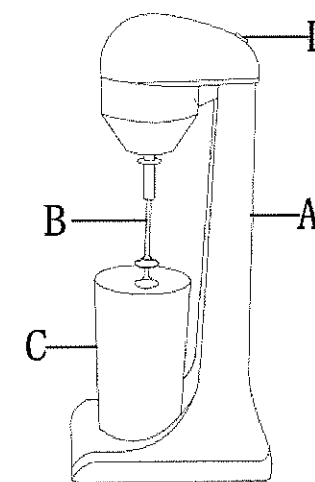

- Make sure the power switch (D) is at "0" position.
- Pour water along with coffee and sugar or any other ingredients that you want to mix, in the container (C) or in another glass of same shape, and then bring the glass close to the axle (B).
- Turn on the power switch (D) and mix the ingredients according to your demands.
- Note: If the ingredients splash out of the cup lower the speed or reduce the amount of ingredients.
- After the mixture is over place the power switch (D) at "0" position.
- Remove the cup by lowering it down and out of the appliance and serve your coffee.
- Disconnect the mixer from electric supply and then you can clean it.
- The axle (B) is made of stainless steel and the plastic parts are not toxic, so you can clean the unit easily with a wet towel.

WARNING: To avoid injury, please do not touch the stirring rod (B) when the MILK SHAKE MAKER is in operation.

**Thank you very much for you purchasing our products,**

**For further service please fill up the details as below**

**Service & Quality Guarantee Card**

**Customer Information**

**Name ( Family/Give Name/Middle Name)**

**Contact Address**

**Contact Telephone No/ Cell Phone No.**

**Profile of Shop/Store**

**Name & Location of the Shop**

**Bill/Receipt Reference No.**

**Date of purchase**

**Product information**

**Description of the product**

**Model/Article No.**

**Series /Reference no.**