

MILK SHAKER

INSTRUCTION MANUAL

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE. KEEP THEM HANDY FOR FUTURE REFERENCE.

IMPORTANT: YOUR MILK SHAKER IS EQUIPPED WITH A POWERFUL & HIGH TORQUE MOTOR, WHICH CAN GENERATE 100 WATTS. MILK SHAKING CAN BE DONE WITHIN A SHORT TIME OF OPERATION. DURING OPERATION, MAKE SURE THAT THE MILK SHAKER IS NOT SWITCHED ON CONTINUOUSLY FOR LONGER THAN 10 SECONDS.

[A] Safety & Operation information

- (1) When using any electrical appliance, especially when children are present basic safety precautions should always be observed.
- (2) Use only on AC230V ~ 50 Hz only.
- (3) Always unplug the appliance immediately after use. To unplug the cord by grasping the plug --- do not pull on the cord.
- (4) Never put the milk shaker under a tap or in a dishwasher but clean it with a damp sponge.
- (6) Never run the milk shaker when it is empty.
- (7) Never attempt to grasp the shaft when it is rotating.
- (8) If the supply cord of this equipment is damaged, it must only be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
- (9) For safety reasons and to avoid maintenance by unskilled persons. The appliance should always be returned to an approved Service Center only for adjustment or repair if required.
- (10) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- (11) Children should be supervised to ensure that they do not play with the appliance.

WARNING - This appliance should be used according to the instructions. Abuse of using the machine will cause hazard.

[B] How to operate the MILK SHAKER

This Milk Shaker can process different style of drinks including milk, coffee & chocolate within 1 minute.

- Add water (never use boiling water), instant coffee or chocolate powder, milk, and sugars into the container cup to about 0.1 liter.
- Raising the container cup until touching the shaker.
- Put on the shaker - Press the Control Button to operate. Press lightly on the button to obtain Low speed and firmly for High speed. The ingredients can be completely mixed and solvent within 10 seconds.
- Release the Control Button will stop the Milk Shaker quickly.
- Add hot or cool water to the container cup until the taste is suitable for you.
- You may process another container cup of drinks after 10 seconds rest of the milk shaker.
- The operation can be carried out for 5 times.

[C] How to clean the MILK SHAKER

Before cleaning the appliance, ensure it has been unplugged.

Do not immerse the appliance in water, detergent or put into the dishwasher.

- (1) Clean the outside surface of the appliance with a damp cloth only. Never use abrasive cleaner or thinner for the cleaning.
- (2) Wash the mixing cup in soapy water, rinse and dry thoroughly. Washing the cup in a dishwasher is not recommended.
- (3) Clean the mixing blade by half filling the mixing cup with warm water. Operate the appliance as described in the operating instruction. Wipe dries the shaft and blade with a soft cloth.

[D] Technical features

- AC230V ~ 50 Hz only
- 100 Watts
- 0.5 liter of container cup
- 2 speed switch : "II" stands for FAST, "I" stands for SLOW.
- GS approved.

BASIC RECIPES

Basic milk shake

180 ml chilled milk
Your choice of flavoring or syrup
(Chocolate, strawberry, banana etc.)
1 scoop vanilla ice cream
Place all ingredients into the cup
Mix for 30 seconds and serve

Mango Bliss

90ml of coconut milk
90ml of low fat milk
70ml of mango frozen yogurt
1/2 mango, peeled, seeded and mashed
Place all the ingredients into the cup.
Mix for 30 seconds.
Pour into glasses.

Orange Whip

180ml skim milk
2 scoops vanilla ice cream
Place all the ingredients into the cup.
Mix for 30 seconds.
Pour into glass.
Dress with whipped cream.
Top with cocoa or cinnamon powder.

Blueberry & Kiwi fruit shake

180ml of cold milk
2 kiwi fruit, peeled and meshed
2 tablespoons of fresh or frozen blueberry.
2 scoop of frozen yogurt
Place all the ingredients into the cup.
Mix for 30seconds.
Pour into glasses.

Tropicana Crush

150ml of pineapple juice
1 teaspoon of sugar
150ml ginger ale
Place all ingredients into cup.
Mix for 20-30 seconds.
Scoop crushed ice into glasses.
Pour over the ice serve immediately.

Citrus Tang

150ml chilled orange juice
50ml chilled lime juice
50ml chilled lemon juice
Place all the chilled juices into the cup,
Mix for 20-30 seconds.
Scoop crushed ice into glasses.
Pour in the mixture.

Tropical malted

180ml cold milk
2 tablespoons pine apple
3 fresh strawberry
1 scoop of vanilla ice cream
1 scoop of strawberry ice cream
1 tablespoon malt
Mash the pineapple and strawberry.
Place all the ingredients into the cup.
Mix for 30 seconds.
Pour into glass.
Top with whipped cream and a cherry.

Pina Colada

40ml coconut milk
65ml cold milk
2 scoops vanilla ice cream
100ml pineapple juice
Place all the ingredients into the cup.
Mix for 30 seconds.
Pour into glass and serve with a straw.

Tropical Passion

150ml coconut milk
80ml pine apple juice
2 tablespoon of chopper pineapple
1/2 tablespoon of lime juice
Place all the ingredients into the cup.
Mix for 20-30seconds.
Scoop 1/2 cup crushed ice into glasses.
Pour into the mixture and serve with straw.

Bloody Mary Crush

180ml tomato juice
1 teaspoon lime juice
1/2 teaspoon Tabasco sauce
Place all ingredients in the cup.
Mix for 20-30 seconds.
Scoop ice into glasses
Pour over the mixture.
Add a wedge of lemon to glass and a celery stalk.

- **ATTENTION:**

Supply Cord and Plug

Always unplug from mains supply when not in use. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Do not let the supply cord touch hot surfaces.

- This apparatus **MUST BE MAINTENANCE TWO (2) TIMES A YEAR**


- **ΠΡΟΣΟΧΗ:**

Καλώδιο Παροχής Ηλεκτρισμού και Τριπολική Πρίζα

Πάντοτε να αφαιρείτε την τριπολική μπρίζα από την εντοιχισμένη πηγή ηλεκτρισμού όταν η συσκευή βρίσκεται εκτός χρήσεως. Μην κακομεταχειρίζεσθε ή προξενείτε ζημιά στο καλώδιο παροχής ηλεκτρισμού. Εάν το καλώδιο παροχής ηλεκτρισμού έχει υποστεί ζημιά, πρέπει να αντικατασταθεί από τον κατασκευαστή ή από τον πράκτορα συντήρησης του κατασκευαστή, ή από παρομοίως προσοντούχο άτομο ούτως ώστε να αποφευχθεί οποιοσδήποτε κίνδυνος. Μην αφήνετε το καλώδιο παροχής ηλεκτρισμού να αγγίζει καυτές επιφάνειες.

- Η συσκευή ΠΡΕΠΕΙ ΑΠΑΡΑΙΤΗΤΩΣ να συντηρείτε δυο(2) φορές τον χρόνο.


Disposal of Old Electrical & Electronic Equipment
(Applicable in the European Union and other European countries with separate collection systems)

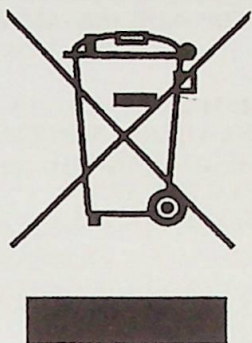

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Απαλλαγή Παλαιού Ηλεκτρικού & Ηλεκτρονικού Εξοπλισμού.
(Εφαρμόσιμο στην Ευρωπαϊκή Ένωση και άλλες Ευρωπαϊκές χώρες, με διαφορετικά συστήματα περισυλλογής.)

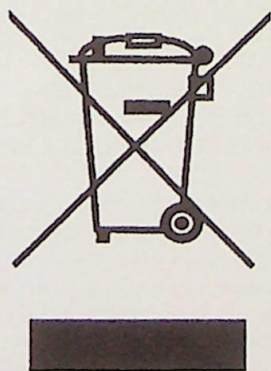

Το σύμβολο αυτό επάνω στο προϊόν ή στην συσκευασία του, υποδεικνύει ότι το προϊόν αυτό δεν πρέπει να μεταχειρίζεται σαν οικιακό απόρριμα. Αντιθέτως, θα πρέπει να παραδίδεται σε σημεία όπου υπάρχουν συστήματα περισυλλογής για την ανακύκλωση του ηλεκτρικού και ηλεκτρονικού εξοπλισμού.

Εξασφαλίζοντας ότι η απαλλαγή των προϊόντων αυτών γίνεται σωστά, βοηθάτε στην απότρευση ενδεχόμενων αρνητικών συνεπειών για το περιβάλλον και για την ανθρώπινη υγεία, που θα μπορούσαν διαφορετικά να προκληθούν από ακατάλληλους χειρισμούς των απορριμάτων αυτών. Η ανακύκλωση των υλικών αυτών, βοηθά στην διατήρηση των φυσικών πηγών.

Για περισσότερες πληροφορίες για την ανακύκλωση του προϊόντος αυτού, παρακαλούμε επικοινωνήστε με τα τοπικά γραφεία της πόλεως σας ή με το μαγαζί από το οποίο αγοράσατε το προϊόν.

ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ ΗΛΕΚΤΡΙΚΗΣ ΦΡΑΠΙΕΡΑΣ ΒΜ208

ΠΑΡΑΚΑΛΟΥΜΕ ΔΙΑΒΑΣΤΕ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΙΕΣ ΠΡΟΣΕΚΤΙΚΑ ΠΡΙΝ ΧΡΗΣΙΜΟΠΟΙΗΣΤΕ ΤΗΝ ΣΥΣΚΕΥΗ. ΚΡΑΤΗΣΤΕ ΤΙΣ ΟΔΗΓΙΕΣ ΑΥΤΕΣ ΓΙΑ ΜΕΛΛΟΝΤΙΚΗ ΣΑΣ ΕΝΗΜΕΡΩΣΗ.

ΣΗΜΕΙΩΣΗ: Η ΦΡΑΠΙΕΡΑ ΣΑΣ ΕΙΝΑΙ ΕΞΟΠΛΙΣΜΕΝΗ ΜΕ ΕΝΑ ΠΟΛΥΣΤΡΟΦΟ ΚΑΙ ΔΥΝΑΤΟ ΜΟΤΕΡ ΠΟΥ ΜΠΟΡΕΙ ΝΑ ΔΩΣΕΙ ΕΝΕΡΓΕΙΑ 130WATT. Η ΑΝΑΔΕΥΣΗ ΜΠΟΡΕΙ ΝΑ ΕΠΙΤΕΥΧΘΕΙ ΣΕ ΠΟΛΥ ΜΙΚΡΟ ΔΙΑΣΤΗΜΑ ΧΡΗΣΗΣ. ΣΙΓΟΥΡΕΥΤΕΙΤΕ ΟΤΙ Η ΣΥΣΚΕΥΗ ΣΑΣ ΔΕΝ ΔΟΥΛΕΥΕΙ ΣΥΝΕΧΩΣ ΓΙΑ ΠΕΡΙΣΣΟΤΕΡΟ ΑΠΟ 30 ΔΕΥΤΕΡΟΛΕΠΤΑ.

A. ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ ΚΑΙ ΑΣΦΑΛΕΙΑΣ.

1. ΑΝ ΧΡΗΣΙΜΟΠΟΙΕΙΤΕ ΟΠΟΙΑΔΗΠΟΤΕ ΗΛΕΚΤΡΙΚΗ ΣΥΣΚΕΥΗ. ΕΙΔΙΚΑ ΟΤΑΝ ΕΙΝΑΙ ΠΑΙΔΙΑ ΚΟΝΤΑ ΟΙ ΒΑΣΙΚΟΙ ΚΑΝΟΝΕΣ ΑΣΦΑΛΕΙΑΣ ΠΡΕΠΕΙ ΝΑ ΤΗΡΟΥΝΤΑΙ.
2. ΧΡΗΣΙΜΟΠΟΙΕΙΤΕ ΜΟΝΟΝ ΣΕ AC230V~50Hz.
3. ΠΑΝΤΑ ΒΓΑΖΕΤΕ ΑΠΟ ΤΗ ΠΡΙΖΑ ΤΗΝ ΣΥΣΚΕΥΗ ΟΤΑΝ ΕΧΕΤΕ ΤΕΛΕΙΩΣΕΙ ΤΗΝ ΧΡΗΣΗ ΠΟΤΕ ΜΗΝ ΤΡΑΒΑΤΕ ΤΗΝ ΣΥΣΚΕΥΗ ΑΠΟ ΤΟ ΚΑΛΩΔΙΟ ΑΠΛΑ ΒΓΑΛΤΕ ΤΗ ΑΠΟ ΤΗ ΠΡΙΖΑ.
4. ΜΗΝ ΤΟΠΟΘΕΤΕΙΤΕ ΤΗ ΣΥΣΚΕΥΗ ΚΑΤΩ ΑΠΟ ΤΗ ΒΡΥΣΗ Ή ΣΤΟ ΠΛΥΝΤΗΡΙΟ ΑΛΛΑ ΚΑΘΑΡΙΣΤΕ ΤΟ ΜΕ ΕΝΑ ΒΡΕΓΜΕΝΟ ΚΑΙ ΚΑΛΑ ΣΤΥΜΜΕΝΟ ΠΑΝΙ.
5. ΠΟΤΕ ΜΗΝ ΧΡΗΣΙΜΟΠΟΙΕΙΤΕ ΑΔΕΙΟ ΤΟΝ ΚΑΔΟ.
6. ΠΟΤΕ ΜΗΝ ΠΡΟΣΠΑΘΗΣΤΕ ΝΑ ΠΑΡΕΜΒΕΤΕ ΟΤΑΝ Η ΣΥΣΚΕΥΗ ΒΡΙΣΚΕΤΑΙ ΣΕ ΔΙΑΔΙΚΑΣΙΑ.
7. ΕΑΝ ΤΟ ΚΑΛΩΔΙΟ ΥΠΟΣΤΕΙ ΑΛΛΟΙΩΣΗ ΠΡΕΠΕΙ ΝΑ ΑΛΛΑΖΕΤΕ ΑΜΕΣΩΣ ΑΠΟ ΕΞΟΥΣΙΟΔΟΤΗΜΕΝΟ ΑΤΟΜΟ ΕΤΣΙ ΩΣΤΕ ΝΑ ΑΠΟΦΥΓΕΤΕ ΤΟΝ ΚΙΝΔΥΝΟ ΗΛΕΚΤΡΟΠΛΗΞΙΑΣ.
8. ΓΙΑ ΛΟΓΟΥΣ ΑΣΦΑΛΕΙΑΣ ΚΑΙ ΠΡΟΣ ΑΠΟΦΥΓΗΝ ΠΡΟΒΛΗΜΑΤΩΝ ΑΠΟ ΑΝΕΙΔΙΚΕΥΤΑ ΑΤΟΜΑ, Η ΣΥΣΚΕΥΗ ΘΑ ΠΡΕΠΕΙ ΝΑ ΚΑΤΑΛΗΓΕΙ ΣΕ ΕΞΟΥΣΙΟΔΟΤΗΜΕΝΟ ΣΕΡΒΙΣ ΓΙΑ ΤΗΝ ΟΠΟΙΑΔΗΠΟΤΕ ΕΠΙΣΚΕΥΗ ΤΗΣ.
9. Για λόγους ασφαλείας και για να αποφύγετε τυχόν κινδύνους από συντήρηση που διεξήχθη από μη-προσόντούχα άτομα, η συσκευή πρέπει πάντα να επιστρέφεται σε ένα εγκεκριμένο Κέντρο Συντήρησης για ρύθμιση ή επισκευή εάν χρειάζεται μόνο.
10. Αυτή η συσκευή δεν προορίζεται για χρήση από άτομα (συμπεριλαμβανομένων και των παιδιών) με μειωμένες σωματικές, αισθητικές ή νοητικές ικανότητες, ή έλλειψη εμπειρίας και γνώσεων, εκτός εάν τους έχει παρασχεθεί εποπτεία ή οδηγίες που αφορούν την χρήση της συσκευής από ένα πρόσωπο που είναι υπεύθυνο για την ασφάλειά τους.
11. Τα παιδιά πρέπει να εποπτεύονται για να επιβεβαιωθεί ότι αυτά δεν παίζουν με τη συσκευή.

(Γ) Πώς να καθαρίζετε το ΣΕΪΚΕΡ ΓΑΛΑΚΤΟΣ

Προτού καθαρίσετε τη συσκευή, βεβαιωθείτε ότι είναι αποσυνδεδεμένη από την εντοιχισμένη πρίζα παροχής ηλεκτρισμού. Μην βυθίζετε την συσκευή σε νερό ή άλλο υγρό, σε απορρυπαντικό και μην την τοποθετείτε σε πλυντήριο πιάτων.

Καθαρίστε την εξωτερική επιφάνεια της συσκευής με ένα υγρό ύφασμα μόνο. Ποτέ μην χρησιμοποιείτε διαβρωτικά καθαριστικά υλικά ή διαλυτικό για μπιγιές στον καθαρισμό. (2) Πλύνετε την κούπα αναμείξεως με σαπουνόνερο, ξεβγάλετε και σκουπίστε τη συσκευή ενδελεχώς. Η πλύση της κούπας αναμείξεως μέσα σε πλυντήριο πιάτων δεν συνιστάται. (3) Καθαρίστε την λεπίδα αναμείξεως μισογεμίζοντας την κούπα αναμείξεως με ζεστό νερό. Χειριστείτε τη συσκευή όπως περιγράφεται στις οδηγίες χρήσεως. Στεγνώστε σκουπίζοντας τον άξονα και την λεπίδα με ένα απαλό ύφασμα.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: ΑΥΤΗ Η ΣΥΣΚΕΥΗ ΘΑ ΠΡΕΠΕΙ ΝΑ ΧΡΗΣΙΜΟΠΟΙΕΙΤΑΙ ΣΥΜΦΩΝΑ ΜΕ ΤΙΣ ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ. Η ΚΑΚΗ ΧΡΗΣΗ ΜΠΟΡΕΙ ΝΑ ΠΡΟΚΑΛΕΣΕΙ ΗΛΕΚΤΡΟΠΛΗΞΙΑ.

Β. ΠΩΣ ΝΑ ΧΡΗΣΙΜΟΠΟΙΗΣΕΤΕ ΤΗΝ ΣΥΣΚΕΥΗ ΣΑΣ.

Η ΦΡΑΠΙΕΡΑ ΣΑΣ ΜΠΟΡΕΙ ΝΑ ΚΑΤΑΣΚΕΥΑΣΕΙ ΔΙΑΦΟΡΕΤΙΚΑ ΕΙΔΗ ΠΟΤΩΝ, ΚΟΚΤΕΙΛ, ΦΡΑΠΕ, ΣΟΚΟΛΑΤΑ, ΓΑΛΑ ΜΕΣΑ Σ' ΕΝΑ ΛΕΠΤΟ.

- ΤΟΠΟΘΕΤΗΣΤΕ ΣΤΙΓΜΙΑΙΟ ΚΑΦΕ Ή ΣΟΚΟΛΑΤΑ Ή ΓΑΛΑ ΜΕ ΤΗΝ ΑΠΑΡΑΙΤΗΤΗ ΠΟΣΟΤΗΤΑ ΖΑΧΑΡΗΣ ΚΑΘΩΣ ΕΠΙΣΗΣ ΚΑΙ ΝΕΡΟ (ΠΟΤΕ ΜΗΝ ΧΡΗΣΙΜΟΠΟΙΗΣΕΤΕ ΒΡΑΣΤΟ ΝΕΡΟ) ΜΕΣΑ ΣΤΟΝ ΚΑΔΟ ΕΩΣ 0.1 ΛΙΤΡΑ
- ΣΗΚΩΣΤΕ ΤΟΝ ΚΑΔΟ ΕΩΣ ΟΤΟΥ ΝΑ ΑΚΟΥΜΠΗΣΕΤΕ ΤΟ ΧΤΥΠΗΤΗΡΙ
- ΘΕΣΤΕ ΣΕ ΛΕΙΤΟΥΡΓΙΑ ΤΗ ΦΡΑΠΙΕΡΑ ΠΑΤΩΝΤΑΣ ΤΟ ΚΟΥΜΠΙ ΕΛΕΓΧΟΥ ΛΕΙΤΟΥΡΓΙΑΣ. ΠΑΤΗΣΤΕ ΕΛΑΦΡΩΣ ΤΟ ΚΟΥΜΠΙ ΩΣΤΕ ΝΑ ΠΕΤΥΧΕΤΕ ΧΑΜΗΛΗ ΤΑΧΥΤΗΤΑ ΚΑΙ ΣΤΑΘΕΡΑ (ΣΥΝΕΧΟΜΕΝΑ) ΓΙΑ ΝΑ ΠΕΤΥΧΕΤΕ ΓΡΗΓΟΡΗ ΤΑΧΥΤΗΤΑ. ΤΑ ΥΛΙΚΑ ΘΑ ΕΧΟΥΝ ΠΛΗΡΩΣ ΑΝΑΜΙΧΘΕΙ ΜΕΣΑ ΣΕ 30 ΔΕΥΤΕΡΟΛΕΠΤΑ.
- ΑΠΕΛΕΥΘΕΡΩΣΤΕ ΤΟ ΚΟΥΜΠΙ ΕΛΕΓΧΟΥ ΛΕΙΤΟΥΡΓΙΑΣ ΚΑΙ Η ΦΡΑΠΙΕΡΑ ΘΑ ΣΤΑΜΑΤΗΣΕΙ ΑΜΕΣΩΣ.
- ΠΡΟΣΘΕΣΤΕ ΖΕΣΤΟ Ή ΚΡΥΟ ΝΕΡΟ ΑΝΑΛΟΓΑ ΜΕ ΤΙΣ ΕΠΙΘΥΜΙΕΣ ΣΑΣ.
- ΜΠΟΡΕΙΤΕ ΝΑ ΕΠΑΝΑΛΑΒΕΤΕ ΤΗ ΔΙΑΔΙΚΑΣΙΑ ΑΦΟΥ ΟΜΩΣ ΕΧΟΥΝ ΠΕΡΑΣΕΙ 10 ΔΕΥΤΕΡΟΛΕΠΤΑ.
- Η ΔΙΑΔΙΚΑΣΙΑ ΑΥΤΗ ΜΠΟΡΕΙ ΝΑ ΓΙΝΕΙ ΕΩΣ 5 ΦΟΡΕΣ

ΤΕΧΝΙΚΑ ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ

- AC30V~50Hz.
- 100WATT
- 0.5 LIT ΠΕΡΙΕΚΤΙΚΟΤΗΤΑ
- ΔΙΑΚΟΠΤΗΣ 2 ΤΑΧΥΤΗΤΩΝ: "II" ΓΙΑ ΓΡΗΓΟΡΗ ΚΑΙ "I" ΓΙΑ ΑΡΓΗ ΤΑΧΥΤΗΤΑ
- CE/GS/Rosh ΠΙΣΤΟΠΟΙΗΤΙΚΑ ΚΑΤΑΛΛΗΛΟΤΗΤΑΣ